



HT1 - HT2 103.050 - 103.051

Rt1 = Reattore lampada insegna  
Rt2 = Reattore lampada illuminazione  
L1 = Lampada insegna fotografica  
L2 = Lampada illuminazione interna  
S1 = Starter lampada L1  
S2 = Starter lampada L2  
Ls1 = Lampada spia generale  
Ls2 = Lampada spia termostato  
V = Ventola  
R = Resistenza  
T = Termostato  
(P1-3) - (P3-5) - (P2-3) - (P2-4) = Contatti commutatore

Rt1 = Beleuchtungs-drossel  
Rt2 = Beleuchtungs-drossel  
L1 = Dias-Schilderbeleuchtungslampe  
L2 = Innenbeleuchtungslampe  
S1 = Beleuchtungsstarter L1  
S2 = Beleuchtungsstarter L2  
Ls1 = Hauptkontrolleuchte  
Ls2 = Thermostatkontrolleuchte  
V = Ventilatormotor  
R = Heizelement  
T = Thermostat  
(P1-3) - (P3-5) - (P2-3) - (P2-4) = Umschalter-Kontakte

Rt1 = Transformateur pour lampe  
Rt2 = Transformateur pour lampe  
L1 = Lampe enseignes  
L2 = Lampe éclairage intérieur  
S1 = Starter lampe L1  
S2 = Starter lampe L2  
Ls1 = Lampe voyant général  
Ls2 = Lampe voyant thermostat  
V = Motorventilateur  
R = Résistance  
T = Thermostat  
(P1-3) - (P3-5) - (P2-3) - (P2-4) = Contacts commutateur

Rt1 = Reactor for lamp  
Rt2 = Reactor for lamp  
L1 = Photo display light  
L2 = Inside lamp  
S1 = Starter lamp L1  
S2 = Starter lamp L2  
Ls1 = On/off warning light  
Ls2 = Thermostat warning light  
V = Motor fan  
R = Heating element  
T = Thermostat  
(P1-3) - (P3-5) - (P2-3) - (P2-4) = Contacts commutator